

## ΒY DTHERS

\*GENERAL\_
HOISTWAY MUST BE IN ACCORDANCE WITH SAFETY
CODE FOR ELEVATORS (ASME A17.1 OR B44-2000) AND ALL
STATE/PROVINCIAL AND LOCAL CODES.

PLUMB HOISTWAY— DUE TO CLOSE RUNNING CLEARANCES DIVIER/AGENT MUST ENSURE THAT HOISTWAY AND PIT (WHERE PROTVIDED) ARE LEYEL, PLUMB AND SQUARE AND ARE IN ACCORDANCE WITH THE DIMENSIONS ON THESE DRAWINGS.

MINIMUM DVERHEAD CLEARANCE - DWNER/AGENT MUST ENSURE MINIMUM DVERHEAD CLEARANCE IS IN COMPLIANCE WITH CODES.

CONSTRUCTION SITE—DWRF/AGENT TO PRITYTIE ALL MASUNRY,
CARPENTRY AND DRYMAL VORK AS REQUIRED AND SHALL PATICH AI
MAKE GOOD CINCLUDING FINISH PAINTING) ALL AREAS WHERE
NALLS/FLORS MAY REQUIRE TO BE OUT, DRILLED IN ALTERED IN
ANY WAY TO PERMIT THE PROPER INSTALLATION OF THE LIFT.

DIMENSIONS
DIMENSIONS
OUNTACTOR/COUSTOMER TO VERIFY ALL DIMENSIONS AND REPORT DISCREPANCIES TO DUR DFFICE IMMEDIATELY. ¥

ELOBACIJEPORT VALL LOADS- STRUCTURAL ENGINEER TO ASSURE THAT BUILDING AND SHAFT WILL SAFELY SUPPORT ALL LOADS JMPOSED BY THE LIFT EQUIPMENT. REFER TO THE TABLES ON THIS DRAWING FOR LOADS IMPOSED BY THE EQUIPMENT.

<u>DOORS-</u> SUITABLE LINTELS MUST BE PROVIDED BY OWNER/AGENT DOOR FRAMES ARE NOT DESIGNED TO SUPPORT OVERHEAD WALL

LICATION / ACCESS— MACHINE RODM LICATED AT THE LIDVEST LEVEL ADJACENT TO HOTSTYAY, UNLESS SHOWN OTHERWISE IN THE LAYOUT DRAWINGS. FIELD ADJUSTMENT BY INSTALLER MAY BE NECESSARY TO MEET JOB STIF CONDITIONS OR REGULATIONS. ACCESTIC MACHINE RODM TO BE THROUGH A SELF CLOSING AND SELF ACCESS

<u>Sleeves for dil & electric lines-</u> provided by others, from Machine Room to Hoistvay, (position per installers Instructions).

	15		115/1PH	SIMIT BY
21	50	60	230/1PH/60HTZ	
15.6	30	30	]TDR	ITOR INFO
SIZE (AMPS)   FUSE (AMPS)   CURRENT (AMPS)	FUSE (AMPS)	SIZE (AMPS)	(V/PH/CYCLE)	
FULL LOAD	TIME DELAY	DISCONNECT	INPUT VOLTAGE	

<u>POWER SUPPLY</u>— (SEE SPECIFICATIONS) LOCKABLE FUSED DISCONNECT WITH AUXILIARY CONTACT TO BRAKE THE BATTERY FEED, OR CIRCUIT BREAKERS VITH A 3-POLE BREAKER FOR BATTERY FEED REQUIRED, IN COMPLIANCE WITH ELECTRICAL CODE, AS FOLLOWS (LOCATED ON VALL ON LOCK JAMB SIDE OF MACHINE ROOM DOOR) Ç₽ BEGIN, PERMANENT

<u>LIGHTING-</u> OWNER/AGENT TO ENSURE AT LEAST AMBIENT LIGHTING OVER ELEVATOR AREA. 5 FTC UR 54 LUX

FASCIA PANEL BELDY UPPER LEYEL ENTRANCE- WHERE REQUIRED, FASCIA PANEL MUST BE FASTENED TO A SOLID WALL AND BE PERPENDICULAR TO THE FLOOR AND VALLS. HIDSTVAY FASCIA IS NOT SELF-SUPPIRTING FOR LING, CONTINUOUS RUNS VOID OF ENTRANCES, ADEQUATE SUPPORT AND THE FASCIA MUST BE PROVIDED BY OTHERS.

RETURN WALLS- RETURN WALLS AT ENTRANCES MUST BE BUILT-N BY OTHERS AFTER ENTRANCE ASSEMBLES ARE IN PLACE ENTRANCE ASSEMBLY MUST BE SECURELY FASTENED TO WALLS BY ELEVATOR

REV-000

MODEL LU, 4854